

# Phone Charging Station



# Pattern

Phone Charging  
Station

## **Main Body Piece**

Cut:

1 Front

1 Back

1 Interfacing/Pellon

1 Fusible Fleece

# Phone Charging Station

## Pocket Piece

Cut:

1 Outer

1 Lining

1 Fusible Fleece (optional)



## Materials Required

- Fabric for 2 main body pieces
- Fabric for 2 pocket pieces
- Pellon or heavy interfacing
- Fusible fleece/wadding
- Grommet

## Construction

If using fusible pellon, apply it to the wrong side of **front** main body piece. Apply the fusible fleece to the wrong side of the **back** main body piece. *(optional)* Fuse the fleece pocket piece to the wrong side of the outer pocket piece.




Align the outer and lining pocket pieces along their top straight edges, matching right sides together; pin. Stitch along the top edge using a 1/4" seam allowance. (If desired, piping can be inserted in this seam.) Press seam open, and then fold the pocket piece wrong sides facing along the seam. Press pocket flat.



Pleat bottom edge of pocket pleat as indicated on the pattern.



Pin the pocket piece on top of the **front** main body piece, so that the right side of the body piece is facing the wrong side of the pocket piece. Make sure to precisely align all of the raw edges, adjusting the pocket pleat if necessary. Baste 1/8" from the edge around the raw edges of the pocket to secure it to the main body piece.

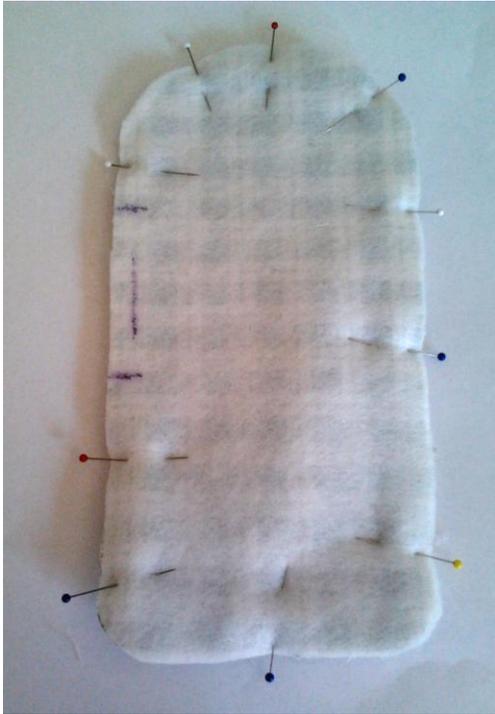

Place the **back** main body piece on top of the front main body/pocket piece, right sides together, aligning the raw edges. Using a 1/4" seam allowance, stitch around the perimeter of the piece, leaving a 2½" opening for turning. Trim the seam to 1/8" around the curves, leaving the unstitched portion of the seam untrimmed. Carefully turn the piece right-side out through the opening and use a point-turner to make sure the seam is entirely turned.

Press the piece thoroughly, making sure the opening portion of the seam is tucked neatly inside of the piece. Pin the opening closed and stitch together by hand.

*(optional)* Edge stitch 1/8" from the outer top edge of the piece, starting and ending just above the left and right top edges of the pocket.



Using the template provided in the grommet kit, mark the placement at the top as illustrated. If desired, stitch just outside of the outside edge of this circle marking to prevent shifting as you set the grommet. Affix the grommet to the piece according to the instructions in the grommet kit.

## Finished Phone Charging Station

